




j) Ensure the green cap in the end of the capsule is clear of any obstructions. The pouch is now ready to be stowed in the tube. Close the pouch using the velcro.

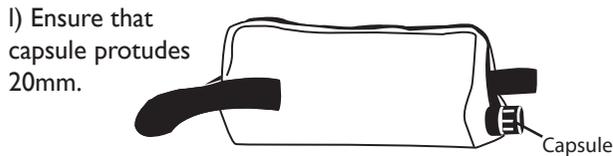


l) Ensure that capsule protrudes 20mm.

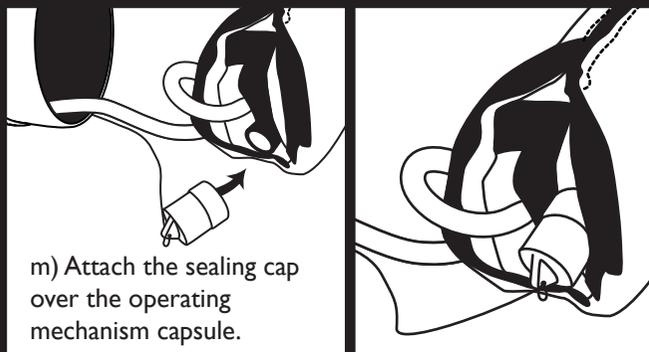

m) Attach the sealing cap over the operating mechanism capsule.

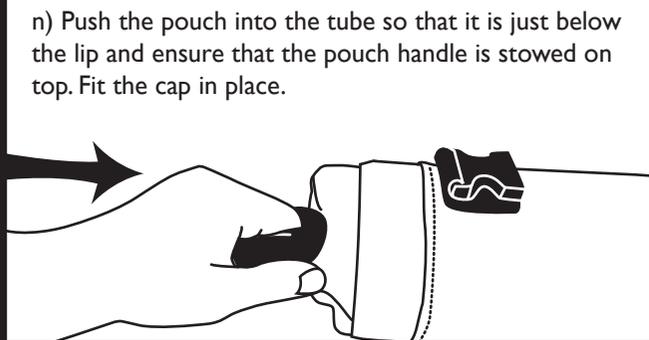

n) Push the pouch into the tube so that it is just below the lip and ensure that the pouch handle is stowed on top. Fit the cap in place.

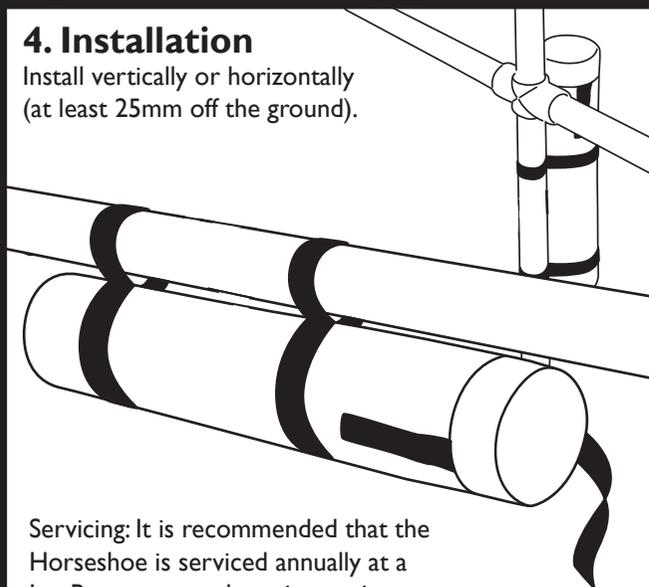

4. Installation


Install vertically or horizontally (at least 25mm off the ground).

Servicing: It is recommended that the Horseshoe is serviced annually at a Jon Buoy approved service station.


JON BUOY® RE-ARM & RE-PACK INSTRUCTIONS

INFLATABLE HORSESHOE

WWW.JONBUOY.COM
T: +44 (0)2380 720800
F: +44 (0)2380 720801
MAIL@JONBUOY.COM

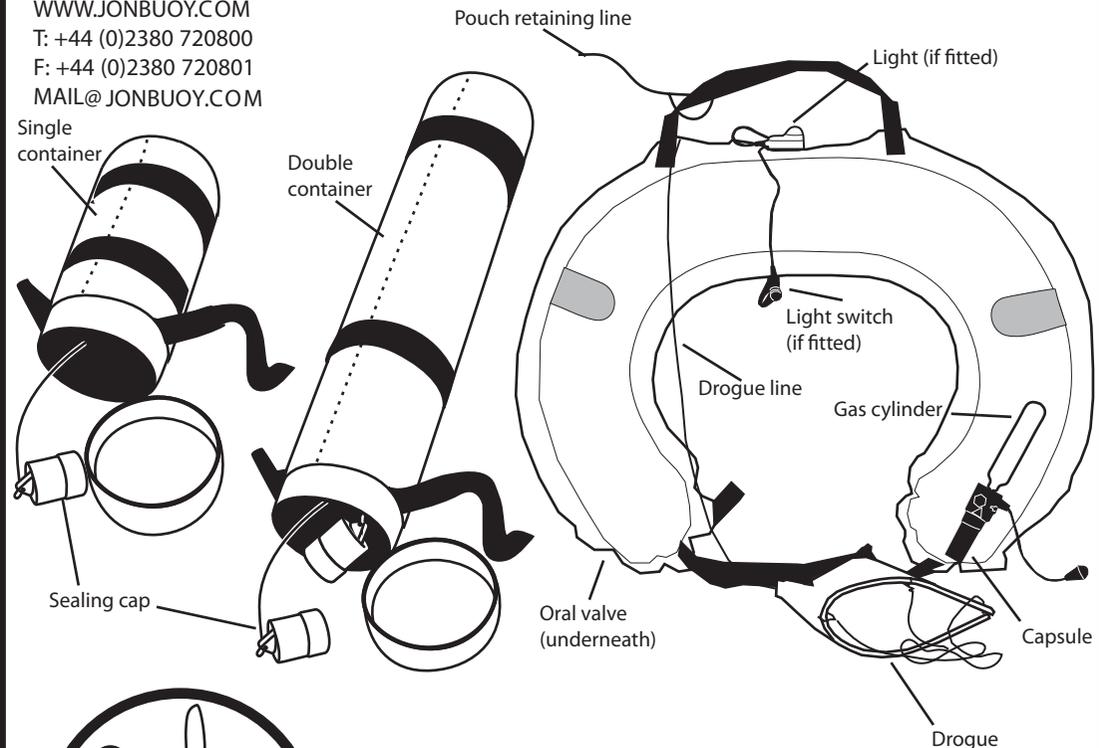


k) Locate the sealing cap(s)
One on single tube
Two on double tube

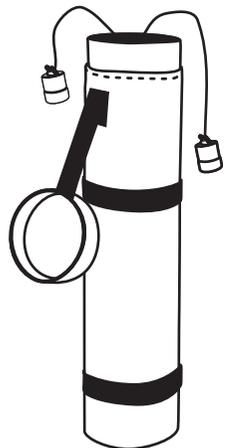


I. Preparation


- Separate the inflated Horseshoe, the Drogue and the pouch by undoing the bowline knots (at the handle).
- Dry the drogue, pouch and the inflated Horseshoe naturally in the air.
- If the Horseshoe has been deflated, re-inflate carefully using the oral valve.
WARNING: Do not use a high pressure air source to re-inflate as this will damage the valve.
- Check all of the component parts for damage.

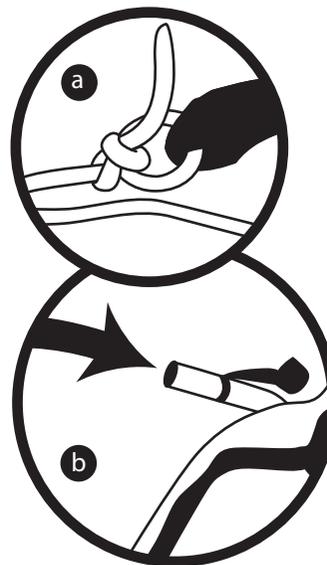


2. Re-Arm

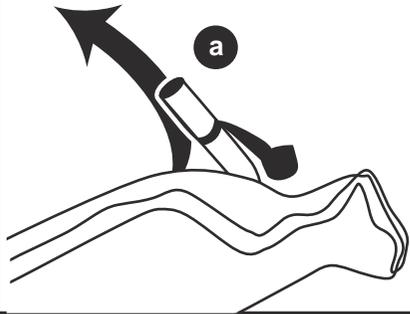

- a) Deflate the Horseshoe fully through the oral valve.
WARNING: Do not use a high pressure vacuum to deflate as this will damage the valve.
- b) Unscrew the old Cylinder.
- c) Re-arm the Operating Head and replace the Automatic Capsule.
- d) Fit the new Cylinder (38gram only).
- e) The Horseshoe is now ready to pack into it's pouch

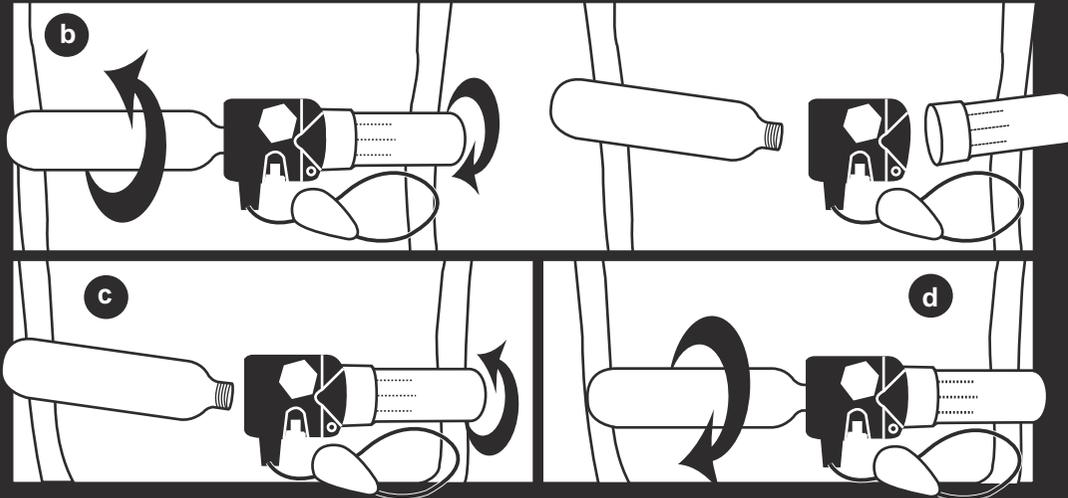


Top end of cylinder

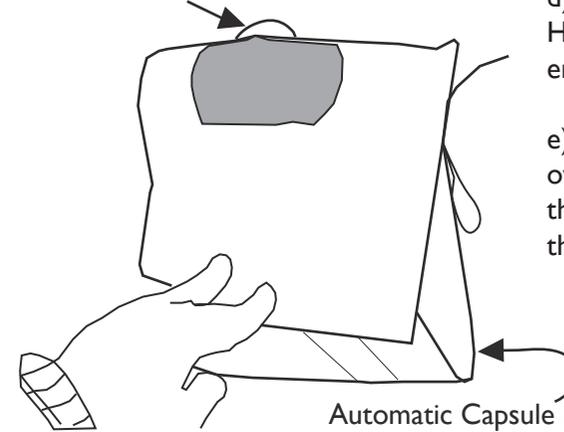

- d) Fold the bottom of the Horseshoe up 20mm above the end of the Automatic Capsule.
- e) Fold the top of the Horseshoe over twice so that it aligns with the lower fold and the top end of the cylinder.


- f) Place the folded Horseshoe on top of the pouch. The Inflation System is to be central and the Automatic Capsule at the opposite end to the handle. The Capsule is to be free of obstructions and must protrude from the pouch.

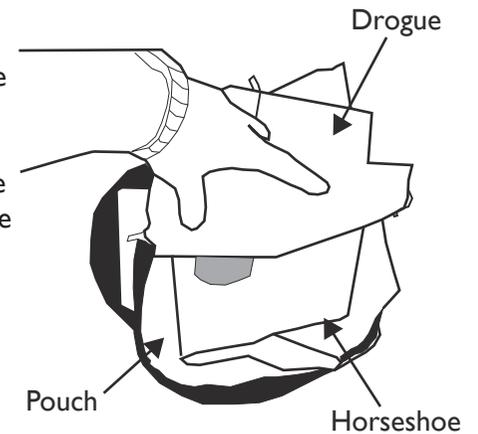



- g) Fold the Drogue and place on top of the folded Horseshoe

3. Re-Pack

- a) With the Automatic Inflation system on the table, fold the Horseshoe in half with the Oral Inflation tube inside.

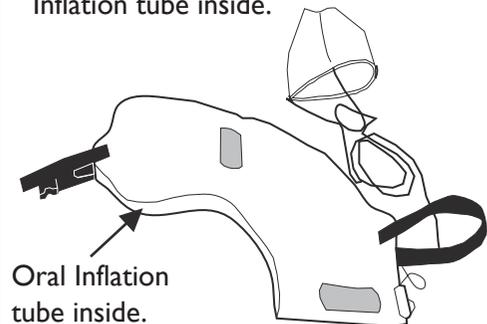

- b) Fold the inner side of the Horseshoe over on top to align with the outer periphery.
- c) Stow the Drogue Line inside the Drogue

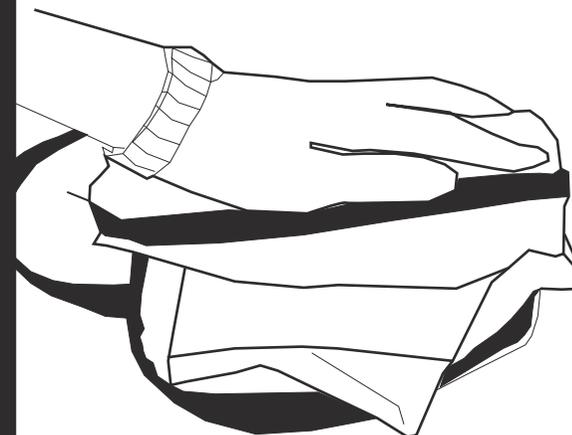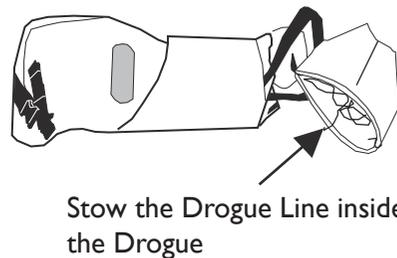

- h) Attach the pouch retaining line to the pouch handle using a Bowline Knot. Stow any excess line inside the pouch.
- i) Bring both sides of the pouch around the Horseshoe, Drogue and attach the Velcro.